

INSTRUCTIONS FILTER EXCHANGE

LG 250 A




Video tutorial LG 250A

The condition of the air filters must be checked regularly. Every 4 months, a **filter check message** appears on the operating unit. The diode in the filter symbol on the bottom left is yellow.

Check the filters in your comfort ventilation system and replace them, depending on the degree of pollution! Filters must be replaced immediately if very dirty. Otherwise, they should be replaced at least every 6 months, depending on outdoor air pollution levels.

Where are the different filters positioned?

- 1 Filter ODA ISO ePM2,5 65% / Outdoor air filter quality class F7 (EN 779) / Optionally Filter ODA ISO ePM1 80% / Pollen filter quality class F9 (EN 779)**
- 2 Filter ETA ISO Coarse 90% / Extract air filter quality class G4 (EN 779)**

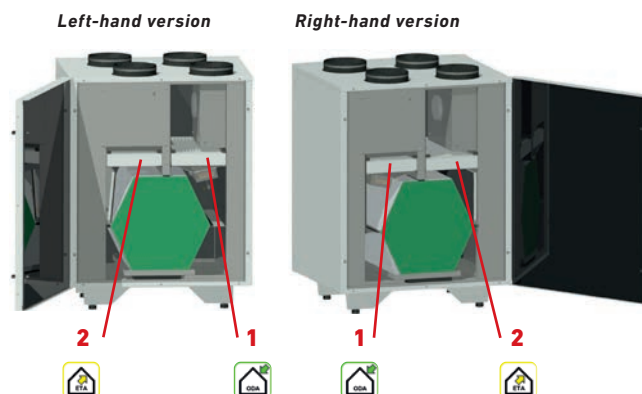

! When performing any cleaning or servicing work on the ventilation unit, always pull the mains plug or fully isolate the device from the mains!



1 Filter check

Filter check message every 4 months. LED at the bottom left is yellow, i.e. check filter with regard to pollution, or replace filter, if necessary.

Our recommendation: Replace filters at least **twice a year**.




2 Switching off the ventilation unit

Switch off the ventilation unit beforehand by pressing the “minus” button once more after having reached ventilation stage 1 and by fully isolating the device from the mains or disconnecting the power plug. In the deenergized state, no diode on the operating unit will then be lit anymore.


3 Opening the ventilation unit

Open the revision front on the ventilation unit by **unscrewing the wing nuts** and opening up the revision front.

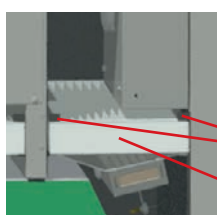

4 Removing the filter stentering rails

Remove the **filter stentering rails (1)** before withdrawing the **air filters (2)** from the device.

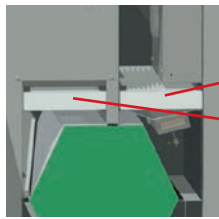


Left-hand version

1

2

5 Remove filter

In order to perform the check, remove the outdoor air filter (1) and the extract air filter (2).

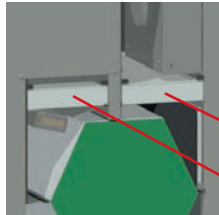

Right-hand version

2

1

6 Filter replacement

Only use original replacement filters for the filter replacement and observe the filter quality class specified! When replacing the air filters, be sure that neither the ventilation unit nor system parts are polluted!

Caution: Observe the mounting direction of the filter!

! Polluted air filters must be disposed of correctly and immediately. It is advisable to place the air filters into an airtight packaging immediately after having removed them from the device.



7 Switching on the ventilation unit

After having completed the filter replacement, switch the system on again immediately by restoring the power supply and then pressing the "plus" button.



8 Deleting the filter check message

Deletion of the message after cleaning/replacing the filter. By simultaneously pressing the plus and minus buttons for at least 5 seconds.



Premature filter replacement case

Reset the filter timer without a pending filter message. By simultaneously pressing the plus and minus buttons for at least 5 seconds.

NOTE: These brief instructions do NOT substitute the **Operating Manual** which is available for download on the Internet. We furthermore recommend concluding a **contract for annual servicing** by a specialised and officially licensed company.

ATTENTION: Only authorised specialist staff may perform work on the ventilation unit (except filter replacement)!